

in.hub Quick Guide

FIRST STEPS WITH YOUR GATEWAY AND SIINEOS



1



Mount the gateway properly to the DIN rail in your control cabinet.

NOTE: Observe the instructions given in the Instruction Manual of your gateway.

 
2



Connect your PC with the gateway using a micro USB cable.

The gateway can, but does not have to be connected to the power supply for this. The power via the USB cable is sufficient.

3



Enter the following address in your browser:
<http://192.168.123.1/smac>

4



Log in with the initial user data (hubadmin/hubadmin).

The SIINEOS-Management-Console opens.

Great! You have successfully connected the gateway. Now it is time to configure the network environment and interfaces. For this, refer to the User Manual of the respective SIINEOS version. You will find the current version in the SIINEOS software on the "Overview" page.

